

INSTALLATION INSTRUCTIONS

OUTLAW DROP RUNNING BOARD




APPLICATION:

Ford F-150 SuperCrew 2015-2025, F-150 Lightning SuperCrew
2022-2024, F-250/350 Crew Cab 2017-2024

PART NUMBER:



20-43945

CONTENT			
ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	2	OUTLAW DROP RUNNING BOARD (1 DRIVER, 1 PASSENGER)	13MM SOCKET
2	1	DRIVER MOUNTING BRACKET A	13MM WRENCH
3	1	PASSENGER MOUNTING BRACKET A	15MM SOCKET
4	2	DRIVER MOUNTING BRACKET B	15MM WRENCH
5	2	PASSENGER MOUNTING BRACKET B	RATCHET
6	6	SUPPORT BRACKET	TORQUE WRENCH
7	24	M8 HEX NUT	
8	24	M8 SPLIT LOCK WASHER	
9	24	M8 FLAT WASHER	
10	12	M10 SERRATED FLANGE HEX HEAD BOLT	
11	12	M10 SERRATED FLANGE NUT	
12	6	M8 ROUND HEAD SQUARE NECK BOLT	
13	18	M8 PLASTIC RETAINER	
ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING			


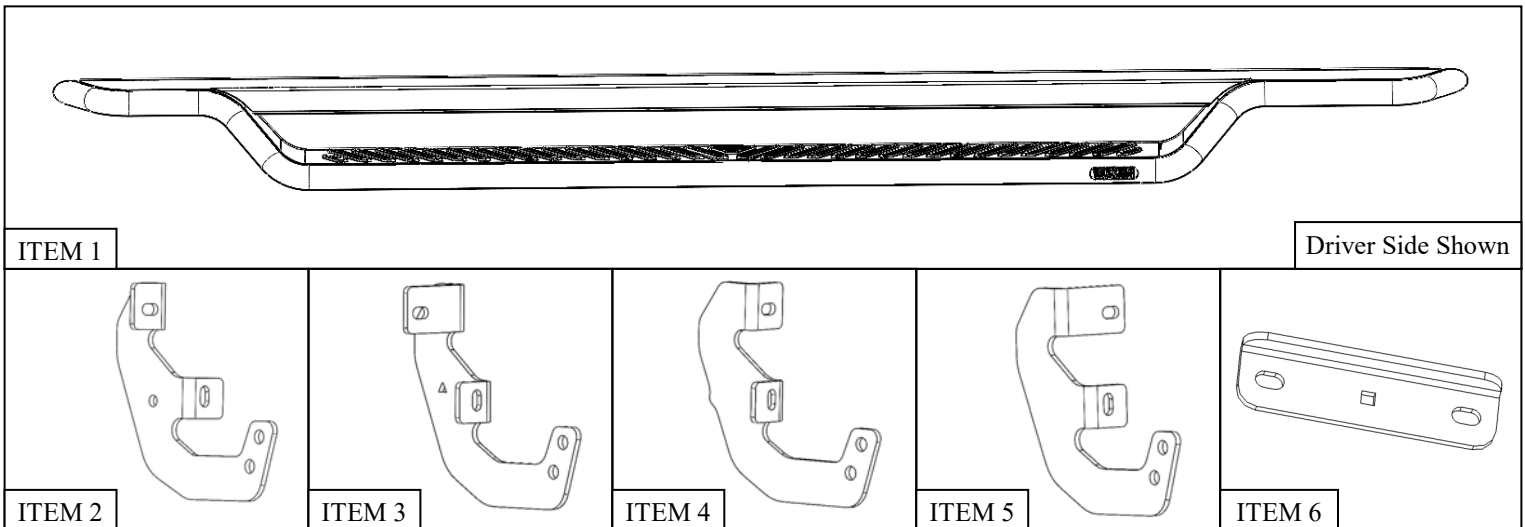


PROCEDURE	
1. Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation. Failure to identify damage before installation could lead to a rejection of any claim.	

2. Starting on the driver's side of the vehicle, find the factory studs located on the rocker panel. There should be three mounting studs. See **Figure 1**.
3. Insert (1) M8 plastic retainer (Item 13) on each factory stud. See **Figure 2**.

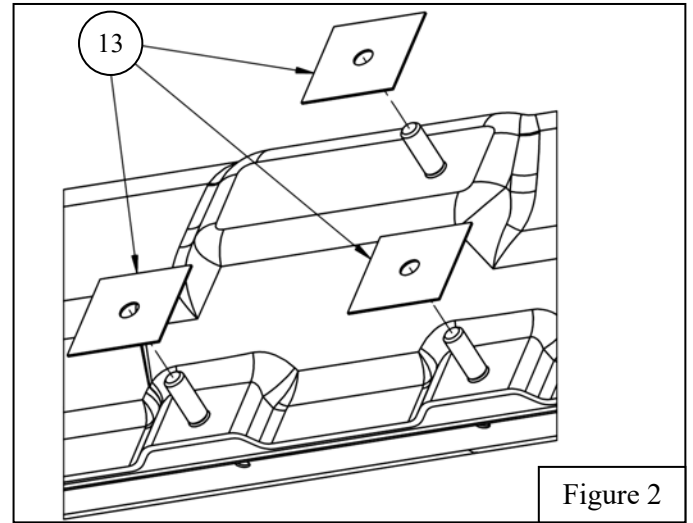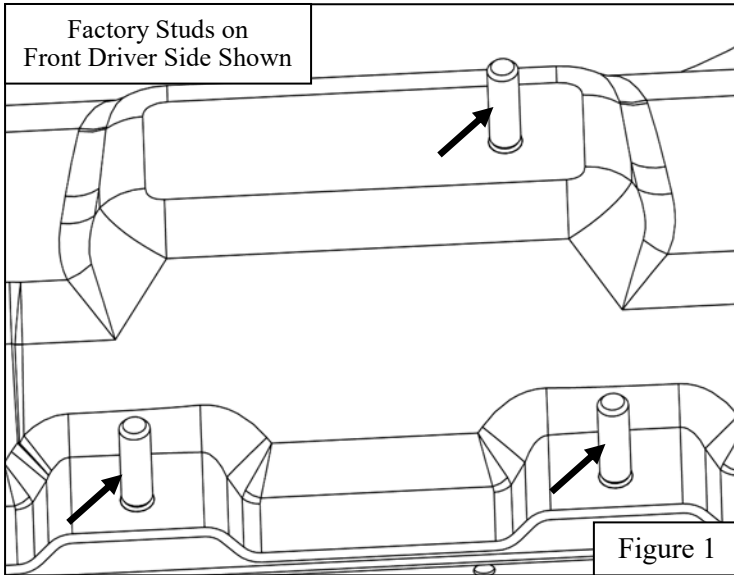

4. Assemble the Support Brackets (Item 6) to all Mounting Brackets using the supplied M8 round head square neck bolt (Item 12) and corresponding M8 hardware (Items 7-9). See **Figure 3**.
5. Loosely install the brackets to their corresponding mounting location using the supplied M8 hardware (Items 7-9). The lower two mounting studs will align with the Support Bracket and the upper mounting stud will align with the Mounting Bracket. See **Figure 4**.
6. Repeat **Steps 2-5** on the passenger side. **Note:** See **Figures 5 & 6** for the correct bracket orientation.

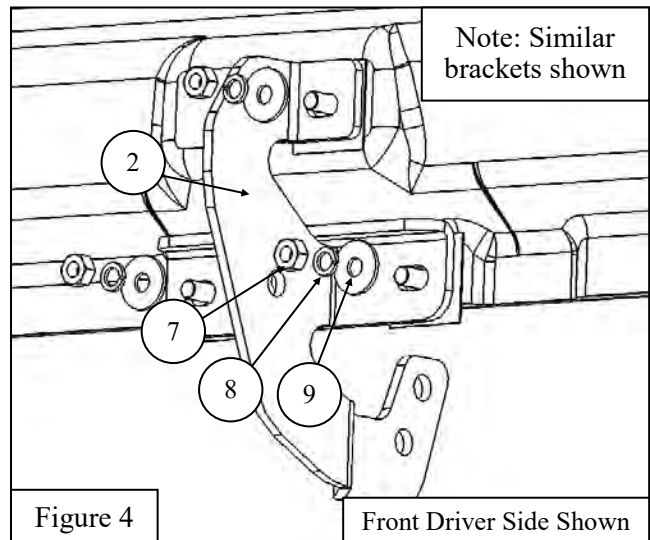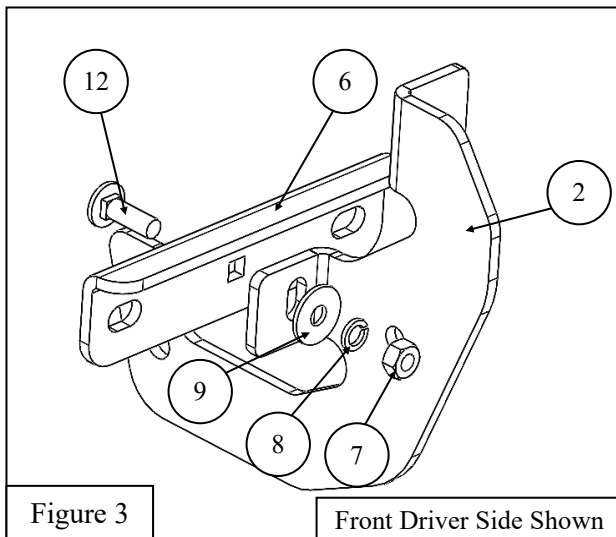

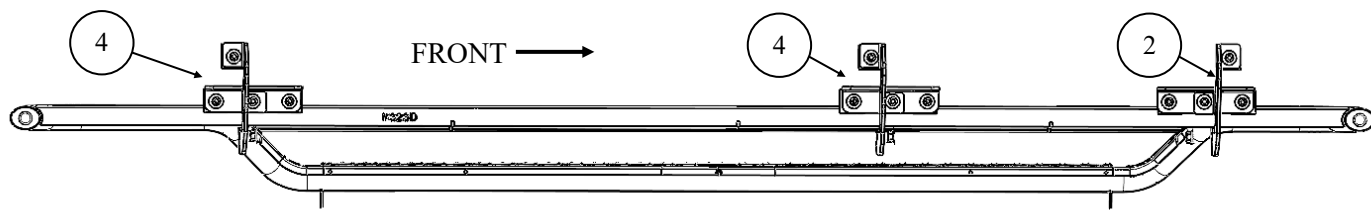


Figure 5

Driver Side

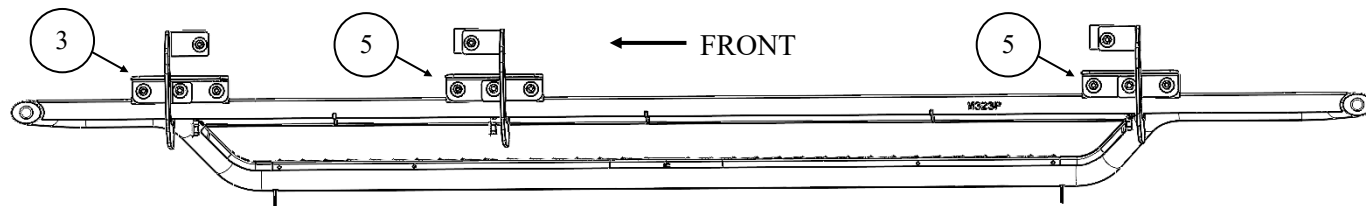


Figure 6

Passenger Side

7. Install the Driver Side Outlaw Drop Running Board (Item 1) using the supplied M10 hardware. See **Figure 7**.
8. Repeat **Step 7** for the Passenger Side Outlaw Drop Running Board.
9. Align and adjust the steps bars as needed. Tighten and torque all hardware as specified: M8 hardware to 15-18 ft-lbs, M10 hardware to 35-38 ft-lbs.

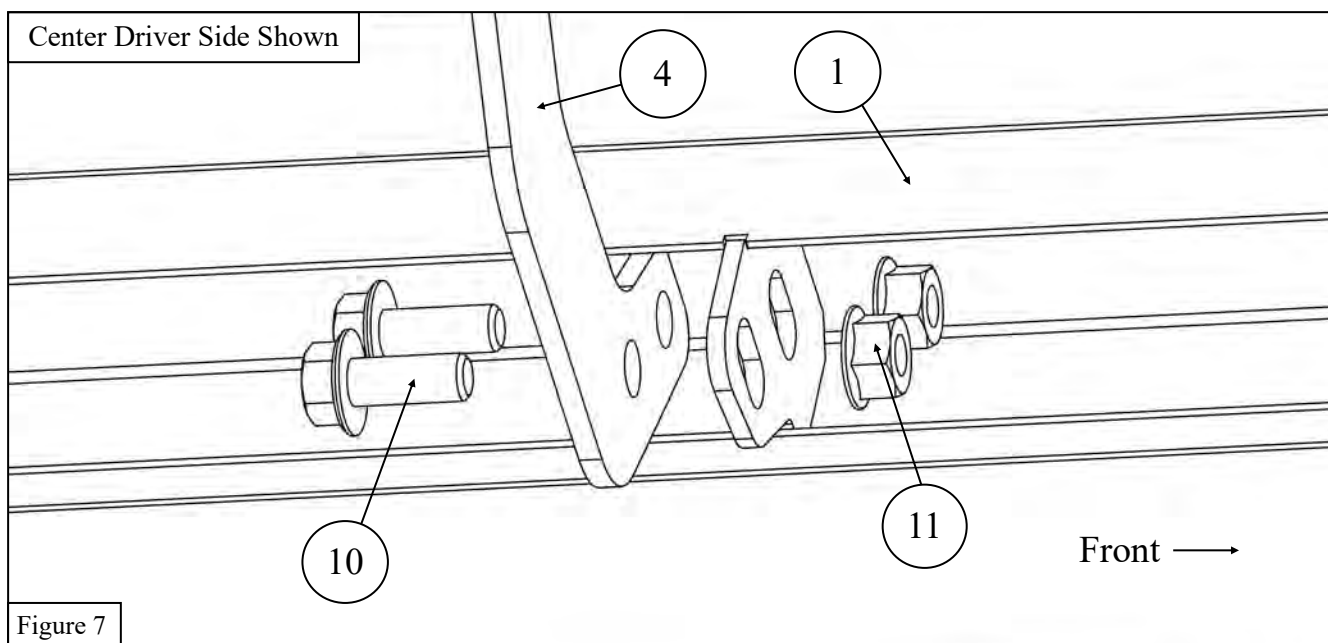


Figure 7

WESTIN

Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

INSTALLATION COMPLETE



CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

WESTIN Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

P.N.: 75-2043945-RevA

ECO #: W25-0016

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com

DATE: 6/16/2025



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY: (if applicable)

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

FOR CALIFORNIA RESIDENTS ONLY-PROP 65 WARNING:

Some products may contain chemicals such as DEHP, which can cause cancer, birth defects or other reproductive harm. For more info go to www.p65warnings.ca.gov



Westin Automotive Products, Inc.
320 W. Covina Blvd
San Dimas, Ca. 91773

Thank you for choosing Westin products
for additional installation assistance please call
Customer Service (800) 793-7846
www.westinautomotive.com