

INSTALLATION INSTRUCTIONS

POLICE WING WRAP

APPLICATION:

2015-2016 Ford Expedition Interceptor

PART NUMBER:

36-53865W

CONTENT

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	WING WRAP ASSEMBLY DRIVER SIDE	RATCHET
2	1	WING WRAP ASSEMBLY PASSENGER SIDE	TORQUE WRENCH
3	4	M10 HEX BUTTON HEAD SCREW (BLACK STAINLESS)	ALLEN WRENCH
4	6	M10 CUP WASHER (BLACK STAINLESS)	16MM SOCKET
5	4	M10 SERRATED FLANGE NUT (BLACK STAINLESS)	10MM SOCKET
6	2	M10 HEX HEAD CAP SCREW (BLACK STAINLESS)	15MM SOCKET
7	2	M6 BUTTON HEAD SCREW (BLACK STAINLESS)	SOCKET EXT.
8	2	M6 FLAT WASHER 18MM OD (BLACK STAINLESS)	
9	2	M6 SERRATED FLANGE NUT (BLACK STAINLESS)	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING

PROCEDURE

1. Remove contents from box, verify if all parts listed are present and free from damage.
Carefully read and understand all instructions before attempting installation.
Failure to identify damage before installation could lead to a rejection of any claim.
2. Install the Police Push Bumper (36-53865) to the front of vehicle. Refer to I/S 75-365386 for information on push bar installation.
3. One side at a time loosely install each Wing Wrap to the Push Bar uprights using the supplied M10 and M6 hardware. (Note: The M10 Hex Bolt threads into a welded nut on the inside the wing wrap.) **See Figure 1**
4. Align and adjust the Wing Wraps as necessary then tighten and torque all fasteners as follows: M6 to 7-9 ft-lbs., M10 to 30 – 35 ft-lbs.

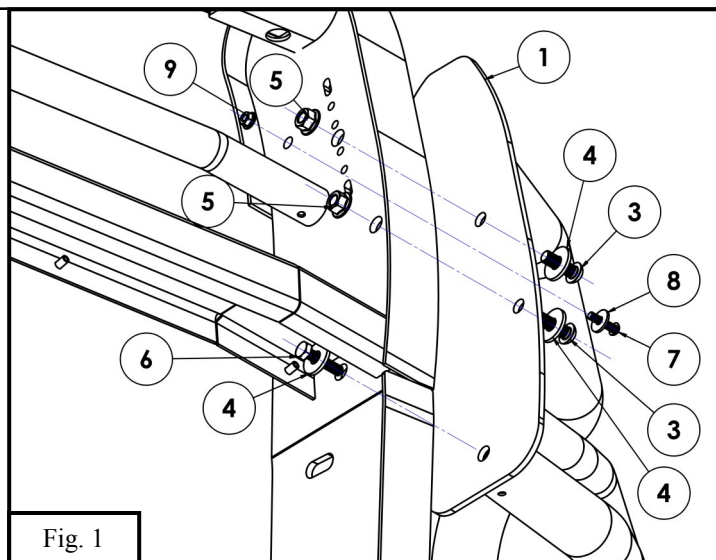


Fig. 1

INSTALLATION COMPLETE



Care Instructions

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

P.N.: 75-3653865W-REV ECO #: W16-0046

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com



AUTOMOTIVE PRODUCTS, INC.



WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

EYE PROTECTION:

ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.

MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

P.N.: 75-3653865W-REV ECO #: W16-0046

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com